


Starting the Generator

Check Oil (Remove front cover) – Fill As Required

Check Fuel Level – Fill As Required

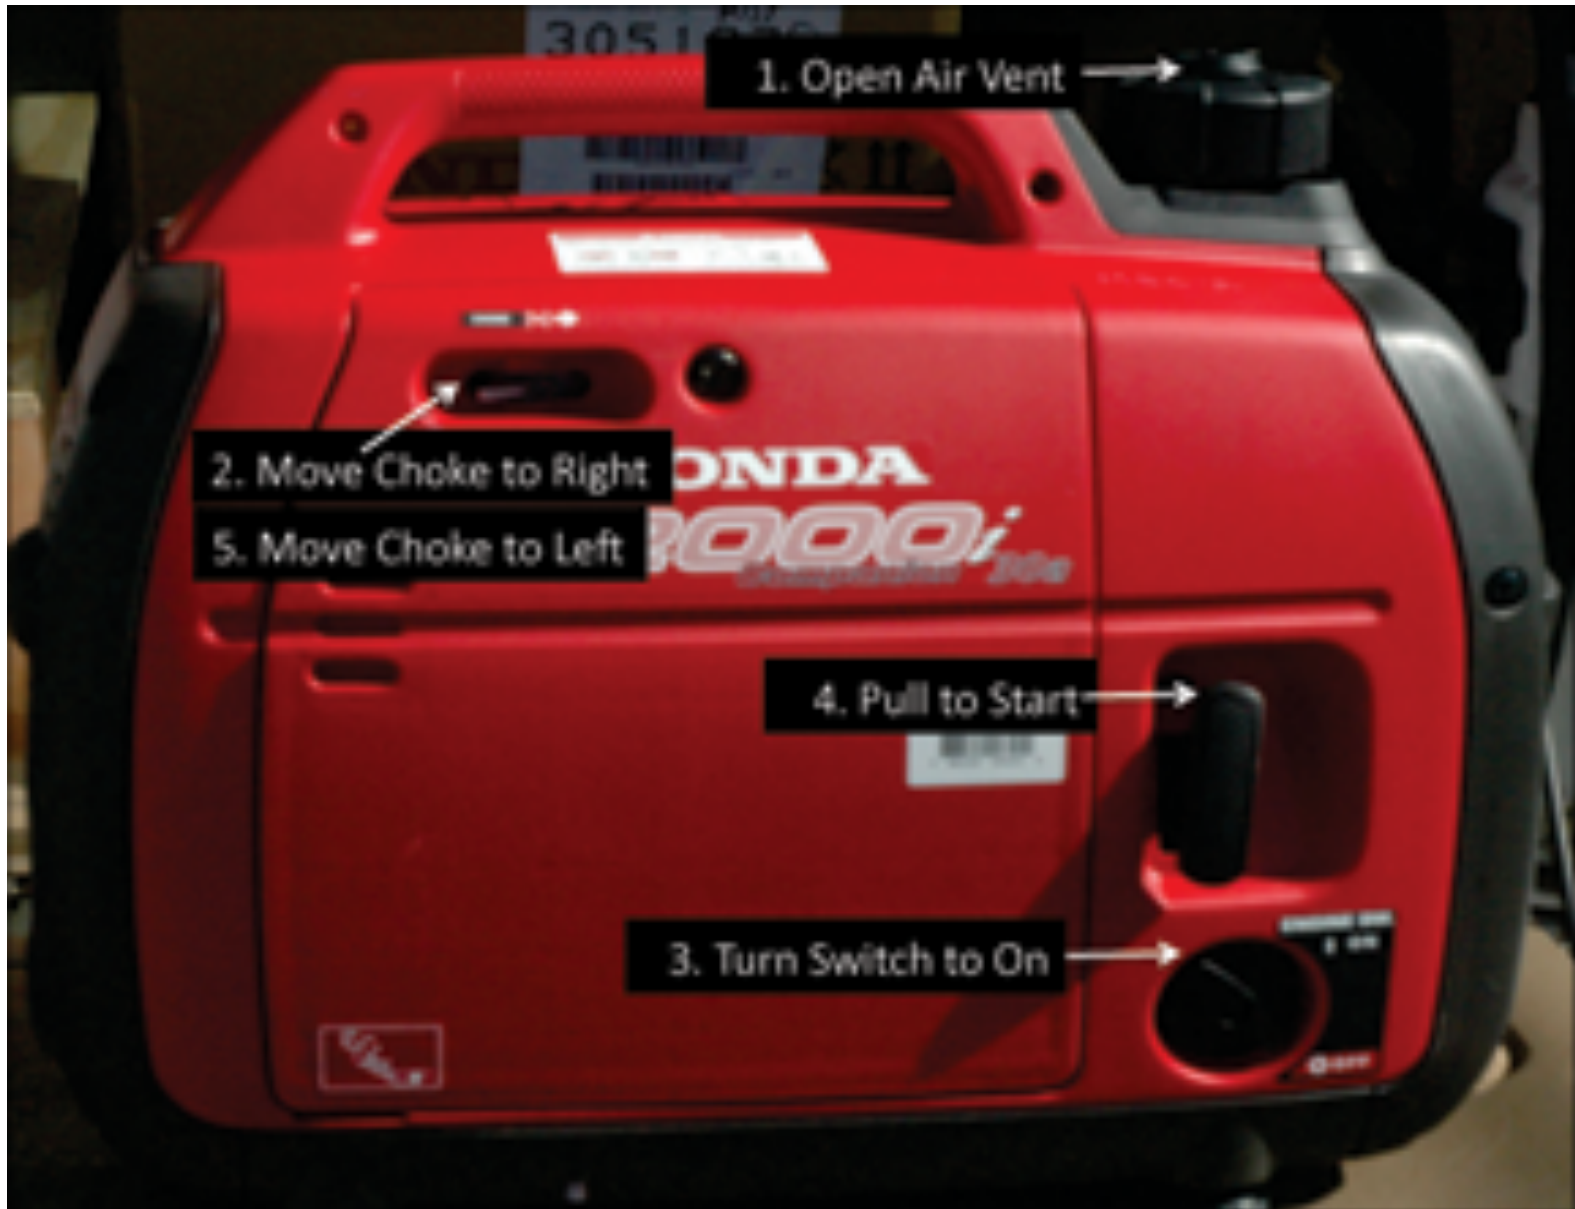

Shutting Down the Generator

Check Oil (Remove front cover) – Refill As Required


Check Fuel Level – Refill As Required



Using the Generator



Starting the Pump

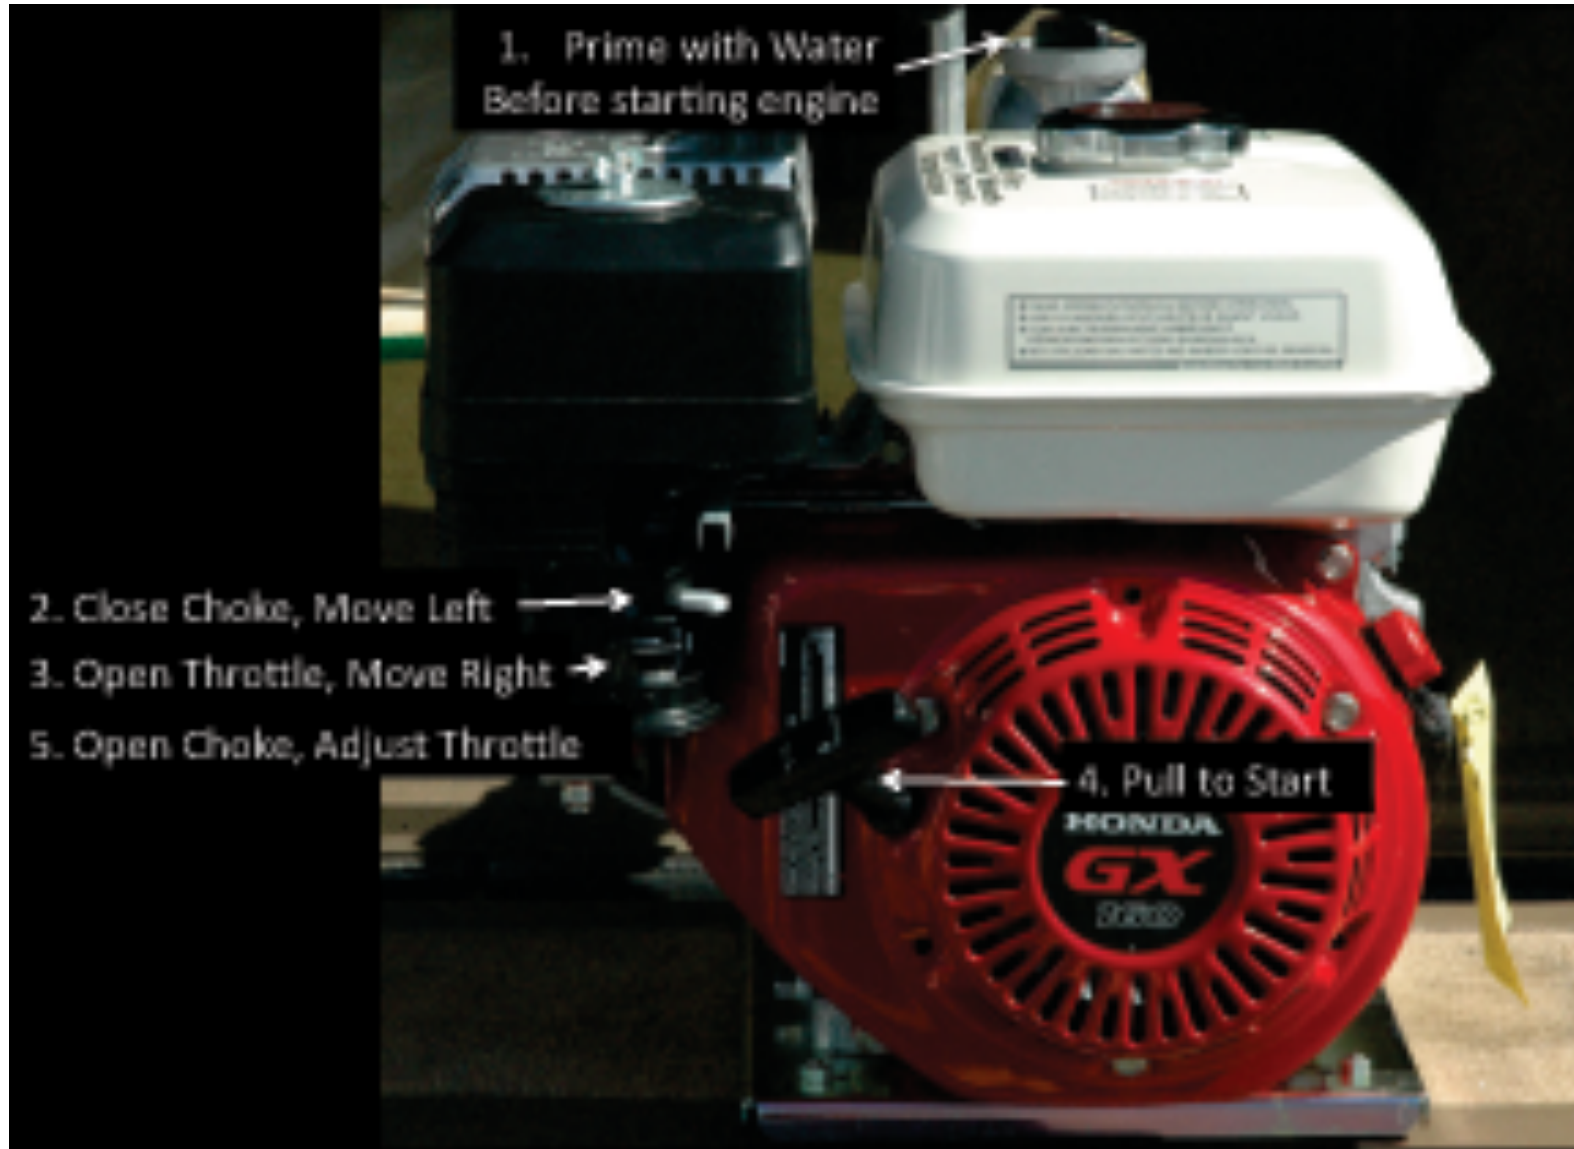

Using the Pump

