

Starting the Pump


1. Prime with Water
Before starting engine

2. Close Choke, Move Left

3. Open Throttle, Move

5. Open Choke, Adjust Throttle

4. Pull to Start

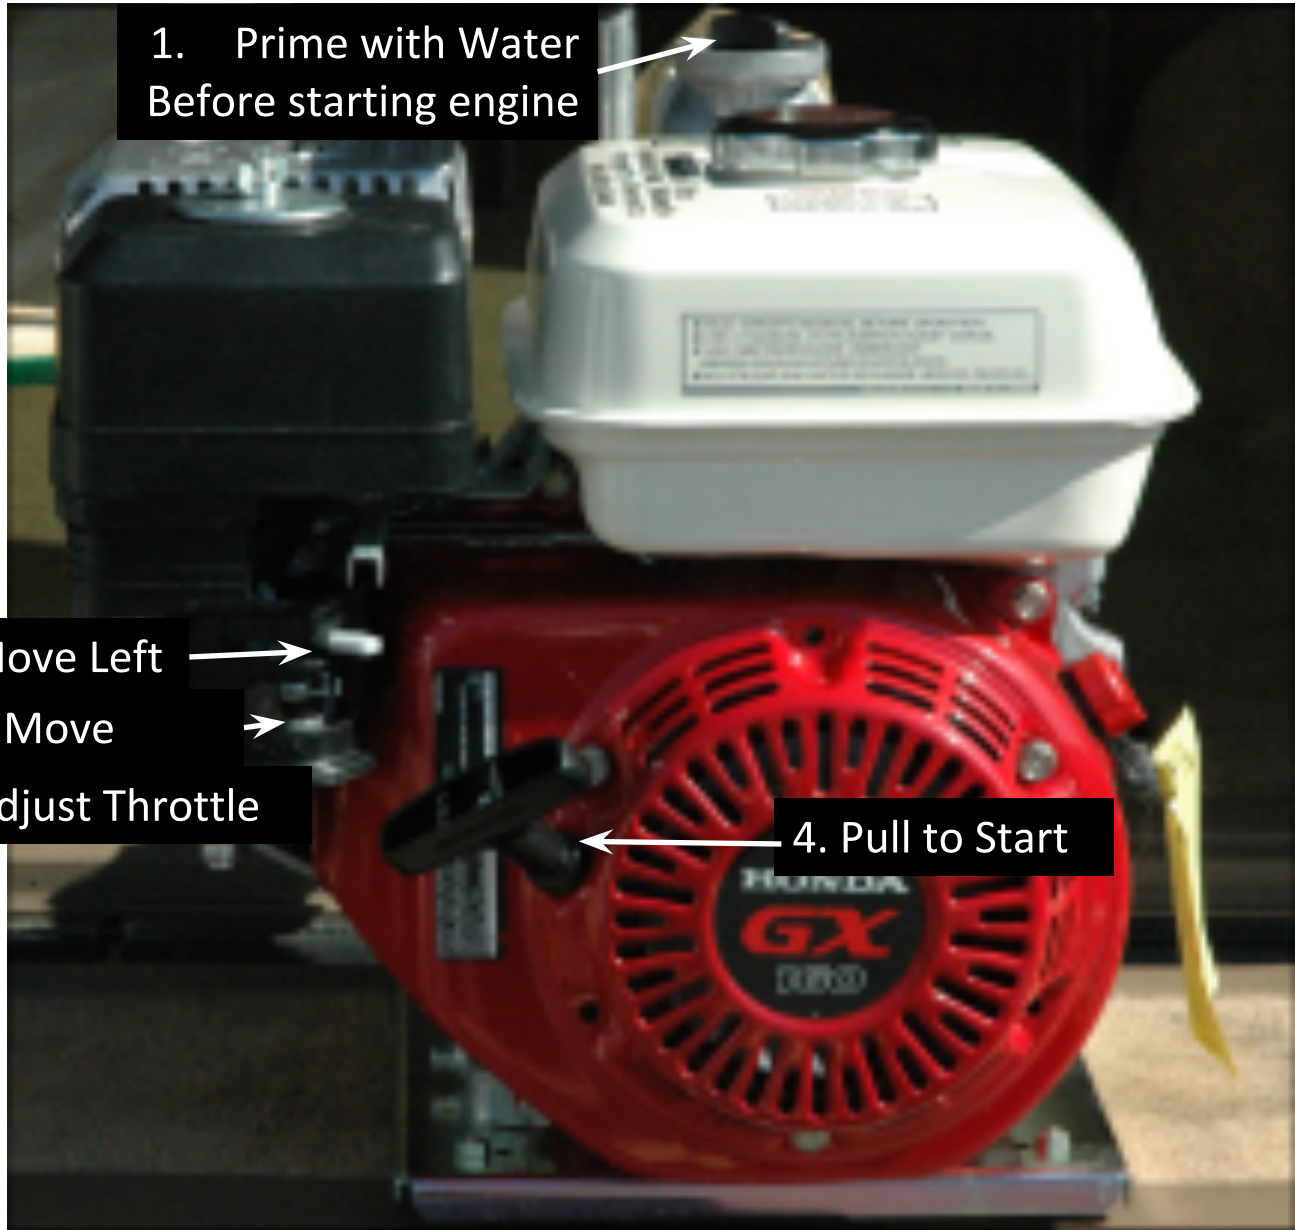

Using the Pump

3. Prime the pump
Before starting engine

2. Connect Outlet Hose

1. Connect Inlet Hose

4. Drain the pump
After stopping engine

