

# Starting the Pump


1. Prime with Water  
Before starting engine

2. Close Choke, Move Left

3. Open Throttle, Move

5. Open Choke, Adjust Throttle

4. Pull to Start

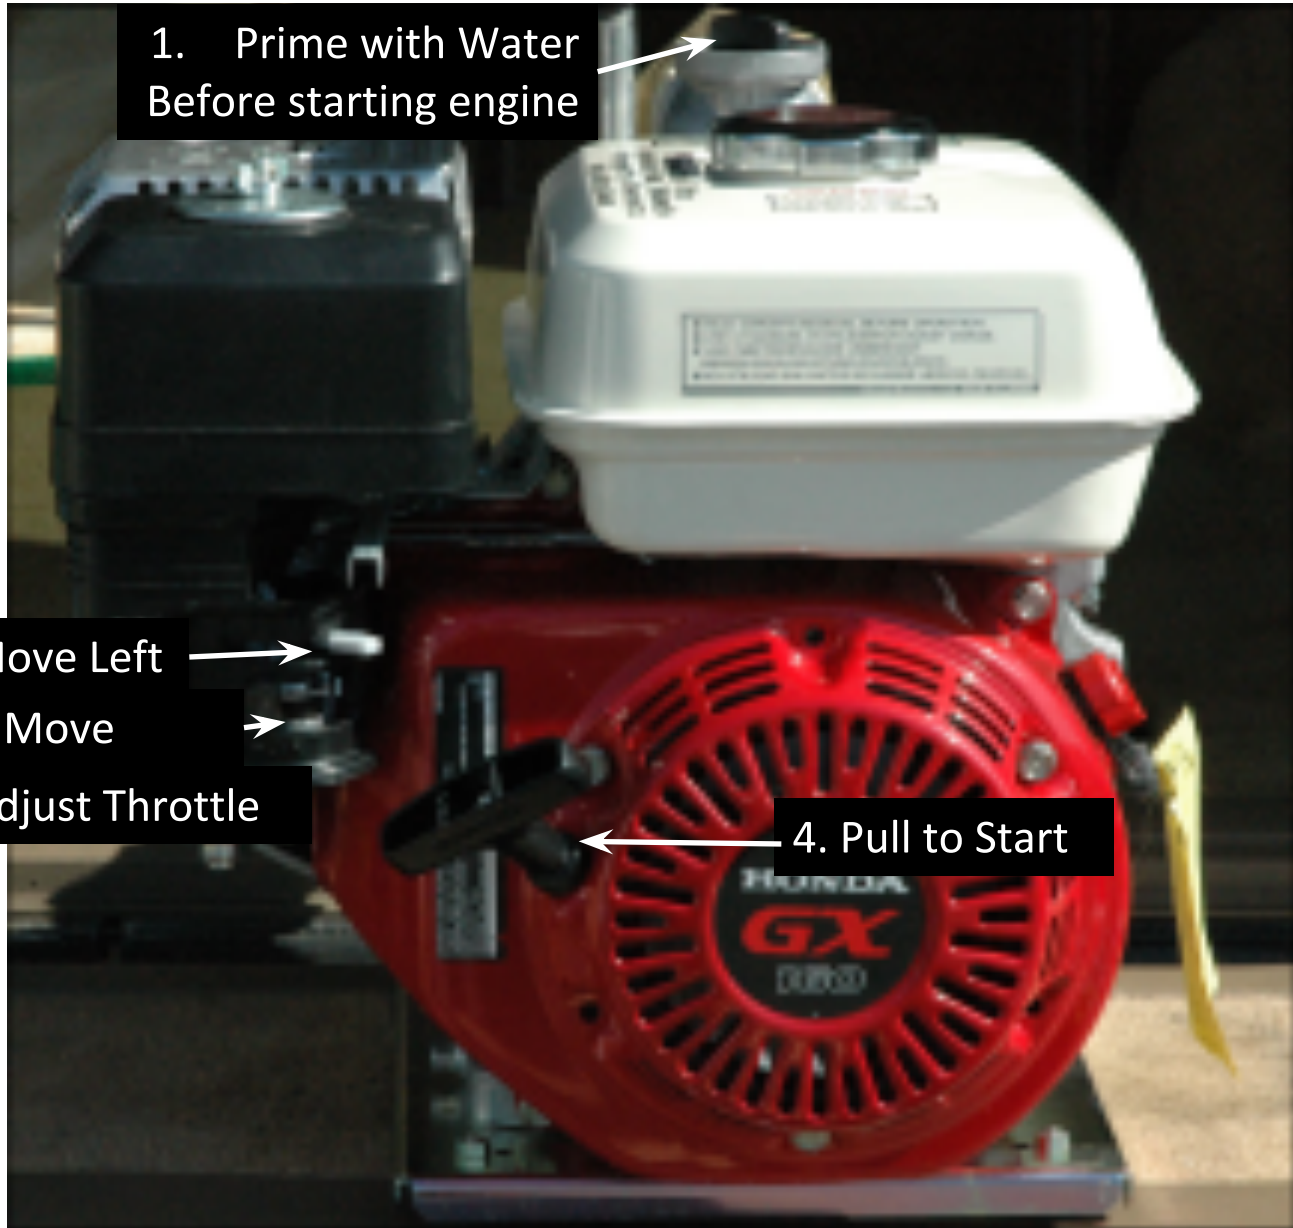

# Using the Pump

3. Prime the pump  
Before starting engine

2. Connect Outlet Hose

1. Connect Inlet Hose

4. Drain the pump  
After stopping engine

